

OVID



200 Ionic **Hair Dryer**

USER MANUAL

Table of Contents

1. Introduction.....	3
1.1. Introduction Used.....	3
2. Important Safety Instructions.....	4
3. Operating Instructions.....	5
3.1. Device Parts / Operation Controls.....	5
3.2 Use Instructions.....	6
3.3 Air Flow Speed.....	6
4. Temperature Settings.....	7
5. Intelligent Modes.....	7
5.1 Cool Shot.....	8
6. Memory Function.....	8
7. Troubleshooting.....	9
8. Accessories.....	10
9. Cleaning and Maintenance.....	10
9.1 Regular Filter Cleaning.....	11
10. Warranty & Support information.....	12

1. Introduction

Congratulations on your purchase!

You have selected a high-quality product. These operating instructions contain important information about safety, usage, and disposal. Before using the product, please familiarize yourself with all instructions. Use the product only as described and for the applications specified. Pass these instructions on to any future owner.

1.1 Intended Use

This appliance is intended only for drying human hair. It is not suitable for wigs and hairpieces made of synthetic material. It is for private use only and not for commercial applications. Follow all safety instructions.



The appliance is not intended for any other purpose, nor for use beyond the scope described. No claims of any kind will be accepted for damage arising as a result of incorrect use. The risk shall be born solely by the user.

2. Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USING | KEEP AWAY FROM WATER



DANGER – Electrical parts are live even when the appliance is turned off.


To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Please don't leave the appliance unattended when plugged in.
2. Close supervision is necessary when used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use.
4. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, or if it is not working properly.
6. Keep the cord away from heated surfaces.
7. Never block the air openings of the appliance.
8. Do not use while sleeping.
9. Do not use outdoors or operate where aerosol products are being used.
10. Do not use an extension cord with this appliance.
11. This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
12. Unplug the appliance immediately after use.
13. Do not plug or unplug the appliance with wet hands.
14. Do not operate with a voltage converter.



WARNING – Do not use near bathtubs or other vessels containing water.

This appliance has a double-insulation system. It adapts automatically to 50 or 60 Hz.

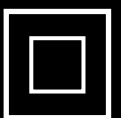

3. Operating Instructions

3.1 Device Parts / Operation Controls

1.	Air outlet
2.	Housing
3.	Temperature setting
4.	LED digital display
5.	Mode selection
6.	Air flow setting
7.	Air inlet
8.	Cool shot button
9.	On/off button
10.	Foldable handle
11.	Cable protective
12.	Power cord
13.	Small nozzle
14.	Middle nozzle
15.	Diffuser
16.	Nylon mesh filter
17.	Metal mesh filter
18.	Magnetic filter cap
19.	Temperature buttons (+/-)

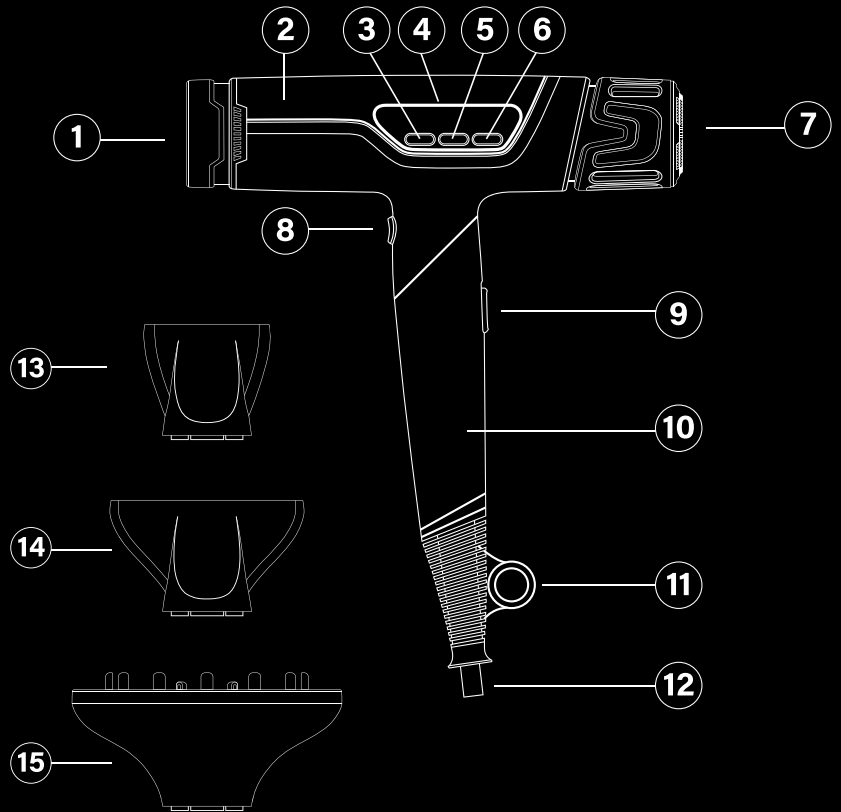 


Fig. 2


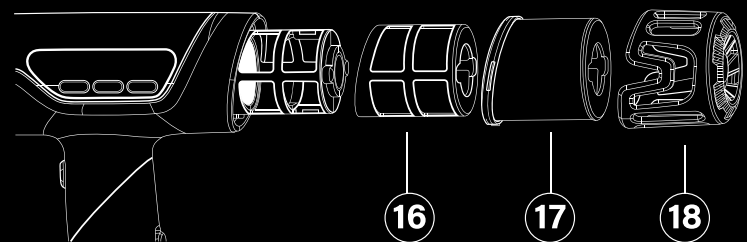 


Fig. 3


3. Operating Instructions

3.2 Use Instructions

 - 1.Ensure your hands are dry before connecting the appliance to the power outlet.
- 2.Connect the hair dryer and switch the power switch from **ON** to **OFF**.
- 3.Adjust the temperature to meet your needs.

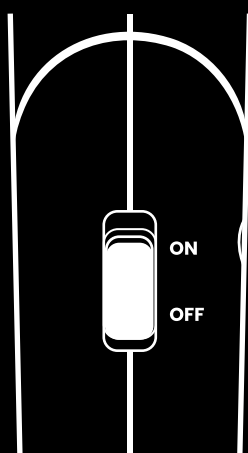

 Upon first use, the hair dryer will blow air at the minimum temperature and intensity (Smooth mode 1 setting).

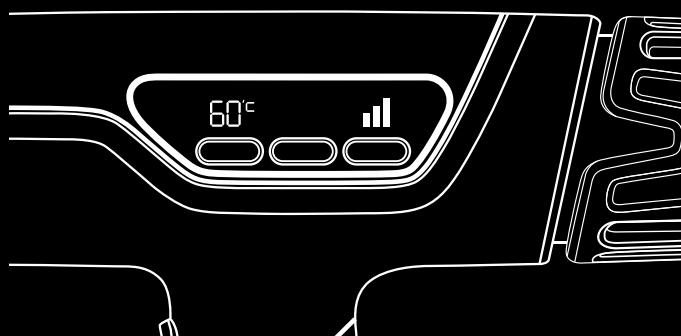

3.3 Air Flow Speed

The hair dryer has three air flow speeds (low-middle-high). Press the right button to adjust the air flow. Corresponding LEDs will light up.

Airflow setting	Low	Middle	High
Display			

4. Temperature Settings



The hair dryer has 3 temperature levels (low-middle-high). Adjust the temperature using the dedicated button. Corresponding LED indicators will light up.

Temperature setting	Cool	Low	Middle	High
Display	75°F	135°F	165°F	195°F
				

5. Intelligent Modes


The hair dryer has three intelligent modes:

- **SWING-Mode:** Alternates cool & hot air flow with high temperature & high air flow speed.
- **SCULP-Mode:** Low temperature and middle air flow speed.
- **GLOSS-Mode:** High temperature and low air flow speed.

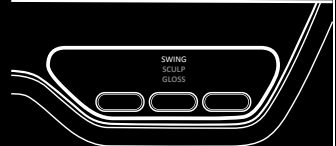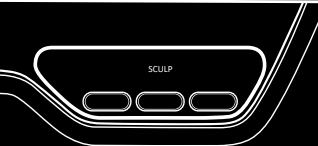MODE setting	SWING	SCULP	High
Display	SWING SCULP GLOSS	SWING SCULP GLOSS	SWING SCULP GLOSS
			


5.1 Cool Shot

Use the '**Cool shot**' button to promote a long-lasting style. When activated, the temperature indicator LEDs of the previous setting will flash, and the appliance will blow cool air. Release the button to return to the previous setting.

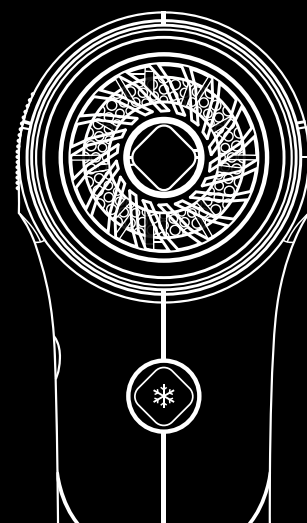


6. Memory Function

The hair dryer memorizes the temperature and speed from previous use, allowing you to set the ideal conditions for your hair type.




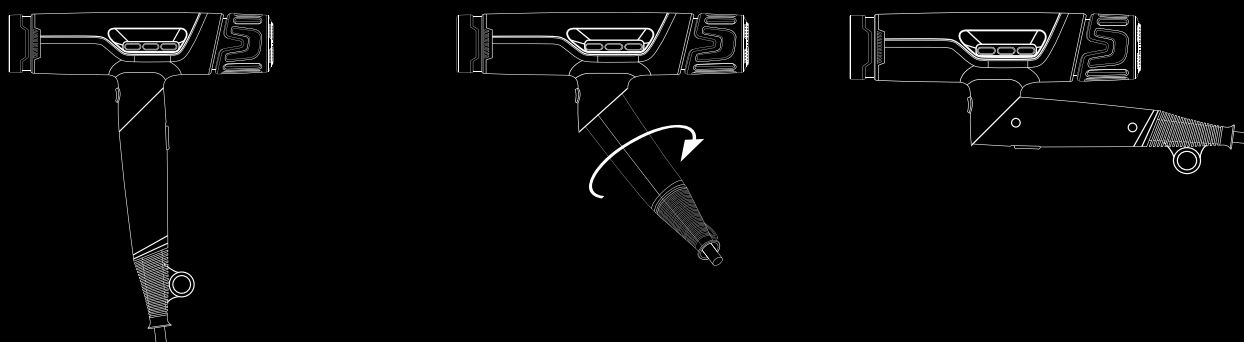


Unfold the hair dryer--- And twist in the direction shown in the arrows.

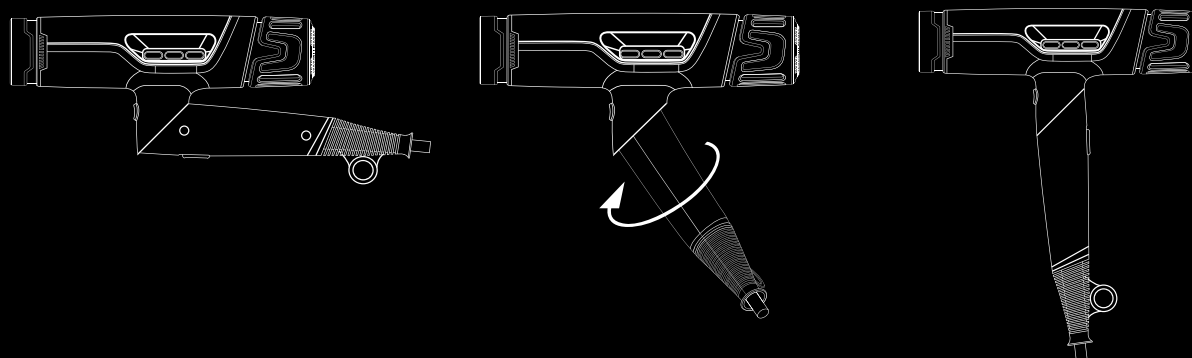

7. Troubleshooting







The hair dryer features error recognition. If a problem is detected, the appliance will not switch on or will stop working. LEDs may signal the following errors:

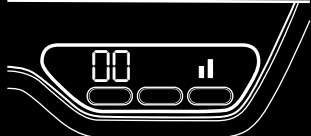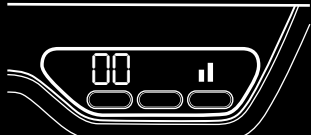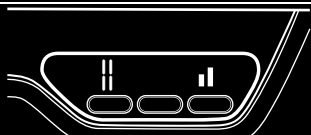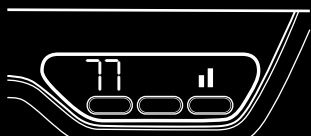Errors	Temperature Display	
OUT-OFF-SENSOR	00	
NTC OUT-OFF-RANGE TEMPERATURE SENSOR	00	
HARDWARE PROTECTION AGAINST OVERCURRENT	11	
SOFTWARE PROTECTION	22	
VOLTAGE BEYOND UPPER RANGE	33	
VOLTAGE BELOW LOWER BANGE	44	
MOTOR JAMMED	55	
DEFECTIVE MOTOR PHASE	66	
Cleaning	77	

8. Accessories

2 concentrator nozzles

1 Diffuser

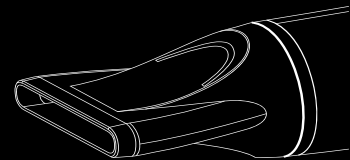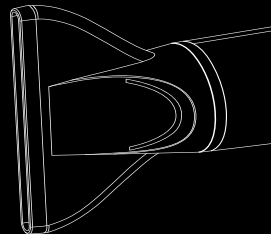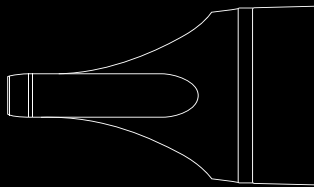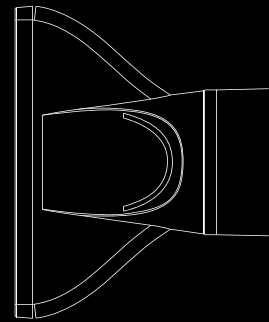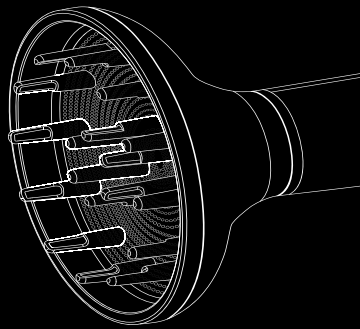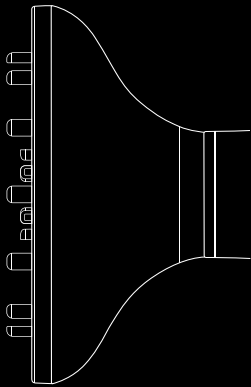

IMPORTANT: Use only original accessories.


9. Cleaning and Maintenance

Keep your appliance well-maintained to ensure the best performance and extend its life cycle. Before cleaning, unplug the unit and wait until it cools off. Periodically remove dust and hair.

9.1 Regular Filter Cleaning

Check the filter unit for hair product residue and debris regularly. Clean the filter monthly according to instructions. Damage from lack of maintenance is not covered under warranty.

- Hold the hair dryer by the handle and pull the rear cover (filter holder) off.
- Clean it with a cloth or damp sponge.
- Ensure it is completely dry before repositioning.
- Clean the body of the hair dryer with a damp cloth or sponge.
- Ensure the appliance is completely dry before use.

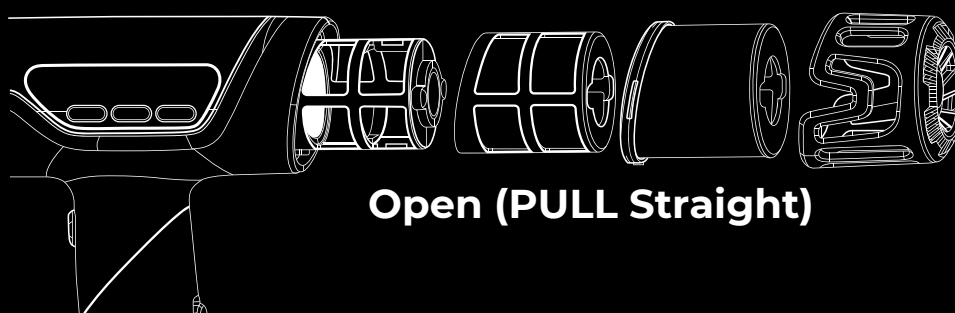

Open (PULL Straight)



Close

10. Warranty & Support Information

To learn more about your limited 1 year warranty for your new 200 Ionic Hair Dryer please click the here.

[200 Ionic warranty](#)

Need more Help? Please choose the appropriate option below.

Live Chat:

OVID Chat is available 7 days a week, including most holidays, from 8 am to 8 pm EST.

Get live assistance with purchases, product inquiries, and support.

To start a chat, simply click on the chat icon located in the lower right corner of your screen or upper right corner if using the OVID Professionals™ app.

Email:

Do you have a general inquiry about OVID products or need assistance with a purchase? Please email us at sayhello@ovid.hair.

Need help with an existing order? Please email us at orders@ovid.hair.

Do you need help with an issue with your product purchase or technical support for our website or app? Please email us at support@ovid.hair.