

OVID



250 PLASMA **Hair Dryer**

USER MANUAL

Table of Contents

1. Introduction.....	3
2. Safety Instructions.....	3
2.1 General Safety.....	3
2.2 Electrical Safety.....	3
2.3 Operational Safety.....	4
3. Product Overview.....	4
3.1 Components.....	4
3.2 Key Features.....	5
4. Specifications.....	5
5. Operating Instructions.....	6
5.1 Initial Setup.....	6
5.2 Basic Operation.....	6
5.3 Advanced Features.....	6
6. Maintenance and Care.....	7
7. Troubleshooting.....	7
8. Warranty & Support information.....	8

1. Introduction

Congratulations on your purchase!

Thank you for purchasing the OVID 250 Plasma Hair Dryer. This manual provides essential information to help you use and maintain your hair dryer safely and effectively. Please read all instructions before using the device.

2. Safety Instructions

READ ALL INSTRUCTIONS BEFORE USING

2.1 General Safety

- Read all instructions before using the hair dryer.
- Keep the appliance away from water. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Do not operate with wet hands or while standing on a wet surface.
- If the hair dryer falls into water, unplug it immediately. Do not reach into the water.
- Always unplug the appliance when not in use and before cleaning.

2.2 Electrical Safety

- Use only with the voltage specified on the rating plate.
- Do not use if the power cord or plug is damaged.
- If the hair dryer malfunctions or is dropped, unplug it and contact customer service.
- Do not use extension cords or power strips with this device.

2. Safety Instructions

2.3 Operational Safety

- Keep hair away from the air inlets to avoid entanglement.
- Do not block the air openings.
- Use only the provided attachments.
- Avoid contact with the heating elements.
- Do not leave the appliance unattended while in use.

3. Product Overview

3.1 Components

1.	Air Outlet
2.	Control Panel
3.	Air Inlet
4.	Power Cord
5.	Speed and Temperature Buttons
6.	Handle
7.	Attachments (large nozzle, small nozzle, diffuser)



3. Product Overview

3.2 Key Features

- Plasma generator for smooth, static-free hair
- Powerful airflow of 38 liters per second
- Three-speed and three-temperature settings
- Cold air button for setting styles
- Memory function to retain last settings
- Self-cleaning mode

4. Specifications

Model	OVID 250 Plasma Hair Dryer
Voltage	110V-125V~ 50-60Hz
Power Max	1800W
Speed Settings	3 (11m/s, 14m/s, 19m/s)
Temperature Settings	3 (57.5°C, 70.8°C, 100°C)
Noise Level	≤75dBA
Motor	Brushless Motor (BL4035-002)
Weight	107g (excluding attachments)
Dimensions	



5. Operating Instructions

5.1 Initial Setup

Ensure the hair dryer is unplugged

1

Attach the desired nozzle or diffuser.

2

5.2 Basic Operation

1. Plug the hair dryer into a standard outlet.
2. Push the power switch to the “I” position to turn on the hair dryer.
3. Use the speed button to select the desired airflow (I , II , III).
 - Speed indicators: Blue light
4. Use the temperature button to select the desired heat setting (I , II , III).
 - Temperature indicators: Red light
5. Press the cold air button to switch to cold air mode.
 - Press again to return to the previous setting

5.3 Advanced Features

1. Memory Function: The dryer retains the last settings used.
2. Self-Cleaning Mode:
 - After plugging in, but before powering on, hold both speed and temperature buttons for 3 seconds to activate cleaning mode.
 - The motor will reverse and clean for 10 seconds.

6. Maintenance and Care

Ensure the appliance is unplugged and cool before cleaning. Use a soft, damp cloth to clean the exterior. Regularly remove and clean the air filter to prevent blockages.

Cleaning

Unplug the hair dryer. Store in a dry, safe place away from children.

Storage

7. Troubleshooting

1. Hair Dryer won't start

POSSIBLE CAUSE: Not Plugged In

- SOLUTION: Ensure the plug is connected to an outlet

2. Low Airflow

POSSIBLE CAUSE: Blocked air inlet

- SOLUTION: Clean the air filter

3. Overheating

POSSIBLE CAUSE: Blocked air vents

- SOLUTION: Ensure air vents are clear

4. Cold air only

POSSIBLE CAUSE: Cold air button activated

- SOLUTION: Press the cold air button to deactivate

8. Warranty & Support information

To learn more about your limited 1 year warranty for your new 250 PLASMA Hair Dryer please click the [here. 250 PLASMA warranty](#)

Need more Help? Please choose the appropriate option below.

Live Chat:

OVID Chat is available 7 days a week, including most holidays, from 8 am to 8 pm EST.

Get live assistance with purchases, product inquiries, and support.

To start a chat, simply click on the chat icon located in the lower right corner of your screen or upper right corner if using the OVID Professionals™ app.

Email:

Do you have a general inquiry about OVID products or need assistance with a purchase? Please email us at sayhello@ovid.hair.

Need help with an existing order? Please email us at orders@ovid.hair.

Do you need help with an issue with your product purchase or technical support for our website or app? Please email us at support@ovid.hair.